



4 0 9

POLLY POCKET FAIRY POLLY STAR WATCH

To activate magic label, warm it for at least 10 seconds by placing a finger or thumb on it. In cold conditions, you may need to gently rub the label.

INSTRUCTIONS FOR USE

NORMAL DISPLAY MODE

1. Normal display mode shows hour and minutes with colon flashing.
2. Press S2 button once to show month and date only. The month and date will appear for 2 seconds, then return to normal display (hour and minutes).
3. Press S2 button twice to show seconds only. Watch will display seconds until S2 is pressed again to return to normal display (hour and minutes).

SETTING THE CORRECT TIME

All setting involves pressing S1. The set digit appears in series, month, date, hour, minutes (see illustration). To change any function, press S1 until relevant function appears. Press S2 until correct figure appears. When all functions are correct, press S1 until hours and minutes show, with colon flashing. If colon is not flashing, press S2.

(S1) SETTING SWITCH

CONTROL NORMAL DISPLAY MODE (S2)

SET MODE FORMAT	
Set month	1
Set Date	1
Set Hour	12 A
Set Minutes	20

5 024095 230055 >

TO CHANGE BATTERY

Remove the screws holding the back plate on the underside of the watch. Remove old battery and replace with new one. Ensure that the positive side of the battery is facing you. Replace back plate and screws.

GUARANTEE

This product is guaranteed to be free from defective workmanship and materials for a period of 12 months. Any part which is defective within one year of purchase or develops defects under normal use, will be replaced or repaired without cost. Any returns must be accompanied with the original receipt indicating the date of purchase. WESCO® assumes no responsibility for the service or replacement of watches which have been tampered with abused or mishandled. All returns to:-

WESCO Limited
2 Wolfe Close
Parkgate Industrial Estate
Knutsford, Cheshire, WA16 8XJ

NOT SUITABLE FOR CHILDREN UNDER 36 MONTHS
DUE TO SMALL COMPONENT PARTS.

ANOTHER **WESCO®** PRODUCT

PLEASE RETAIN THIS INFORMATION FOR FURTHER REFERENCE.

CE 1994 MADE IN CHINA

© 1994 BLUEBIRD TOYS (UK) LTD
UNDER LICENSE FROM ORIGIN PRODUCTS LIMITED CONFORMS TO B.S. 5663