 




POLLY'S SECRET DIARY

*Electronic Data-Bank
with 17 different
features !*

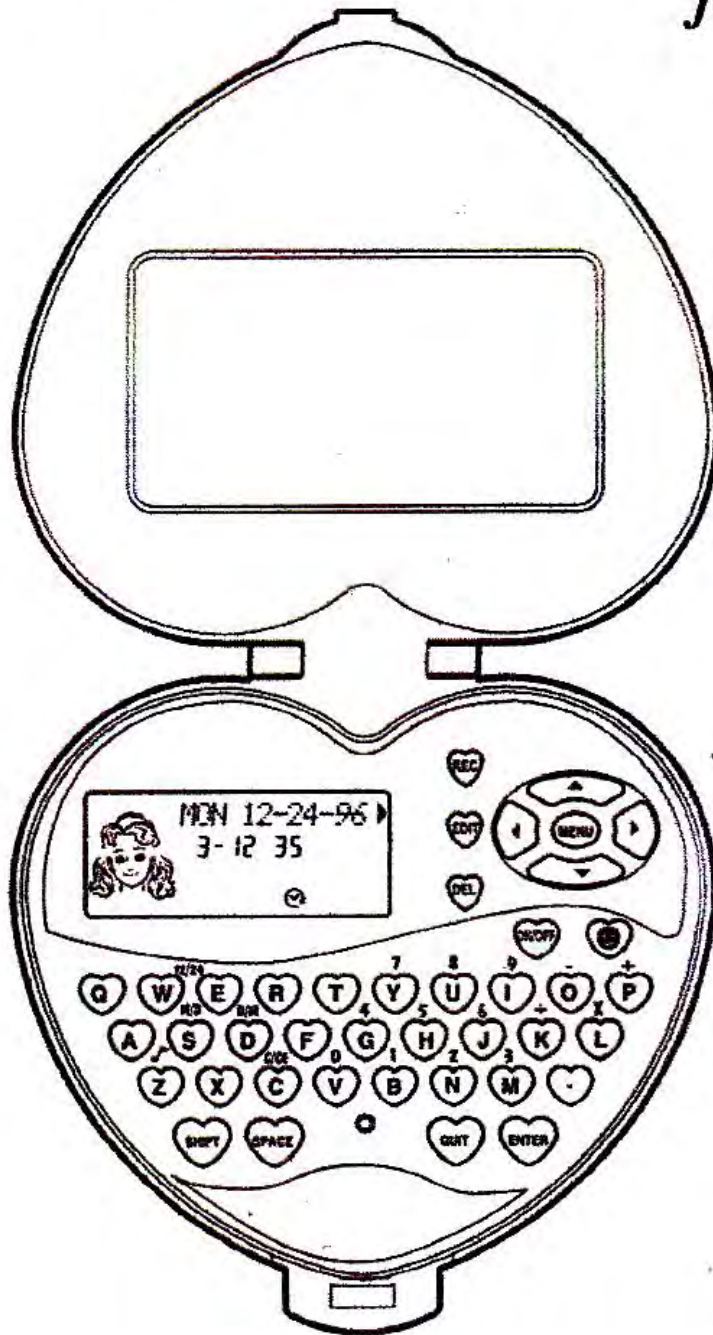

Instruction Manual



60008

Introduction

Thankyou for purchasing Polly's Secret Diary. We are committed to provide the best possible products to fulfill your requirements. Before trying to use it , be sure to read this instruction manual carefully.

Polly's Secret Diary can produce display messages in any one of 5 different languages: English, French, German, Italian and Spanish. Just simply switch on the unit and press the "L" key. The name of the current language will be displayed. Then you can choose your languages that you want to use by pressing the up/down buttons.

After you have selected your operation language, you are about to use the first unique electronic organizer for the kids!



Contents

<i>Summmary of Features.....</i>	<i>4</i>
<i>Keys and Display.....</i>	<i>7</i>
<i>Get Start.....</i>	<i>9</i>
<i>Time and Calendar Screen.....</i>	<i>9</i>
<i>Main Menu.....</i>	<i>10</i>
<i>Phone Directory.....</i>	<i>10</i>
<i>Face Maker.....</i>	<i>12</i>
<i>Calulator.....</i>	<i>13</i>
<i>Scheduler Items.....</i>	<i>14</i>
<i>Alarm.....</i>	<i>16</i>
<i>Match-Maker.....</i>	<i>17</i>
<i>Fortune-Teller.....</i>	<i>18</i>
<i>Secret Password.....</i>	<i>19</i>
<i>General Information.....</i>	<i>20</i>
<i>General Precautions.....</i>	<i>22</i>



Summary of Features



Face Maker

You can combine various facial features to create portraits of the people whose names, addresses, and phone numbers you store in one of your telephone directories.



Phone Directory

In this unit you can record 80-100 entries. Each entry can hold the name and address (up to 64 letters each), the phone number (up to 12 digits) and a fun face.



Calculator

A 10 digit calculator performs most common numerical operations, with user-friendly key arrangement.



Scheduler

Stores the date, time, and the type of each appointment. When that date and time arrives - Polly's Secret Diary will remind you by sounding its alarm and displaying the stored message.



Alarm

This unit can also function as a handy daily alarm clock which can wake you up every morning or remind you of an important meeting.

Language Selection

Polly's Secret Diary can produce display messages in any one of 5 different languages: English, French, German, Italian and Spanish.





Match-Maker

Tells you whether or not you are compatible with that special someone. There are different levels of compatibility from 1 to 10.



Fortune-Teller

Once you have entered your birthday, you can check your fortune today, or for any day.



Diary/Things to do

You can store up notes, or record things that you have to do, such as meeting or calling a friend, shopping list, etc. You can record for each entry a message (up to 64 letters / digits) and date and time (for the built-in alarm).



Birthdays

With Polly's Secret Diary, you can record the birthdays, or any other anniversaries, of all your friends. The alarm will remind you when the day comes.



Homework

With this unit, you can record all your homework assignments. The unit will remind you about those assignments with the date and time that you put in.



Calendar

To show you the date and day of the week.



Clock

This real time clock will make sure you are always on time. Shows the exact time in hours, minutes and seconds and the date.



Secret Password

Stores your private ideas you wish to keep confidential. No body can gain to access to the Secret Memory area without knowing your password.




Auto power - off

This unit will switch itself off after about 2 minutes in order to save the batteries and protect your information.



Keys and Display

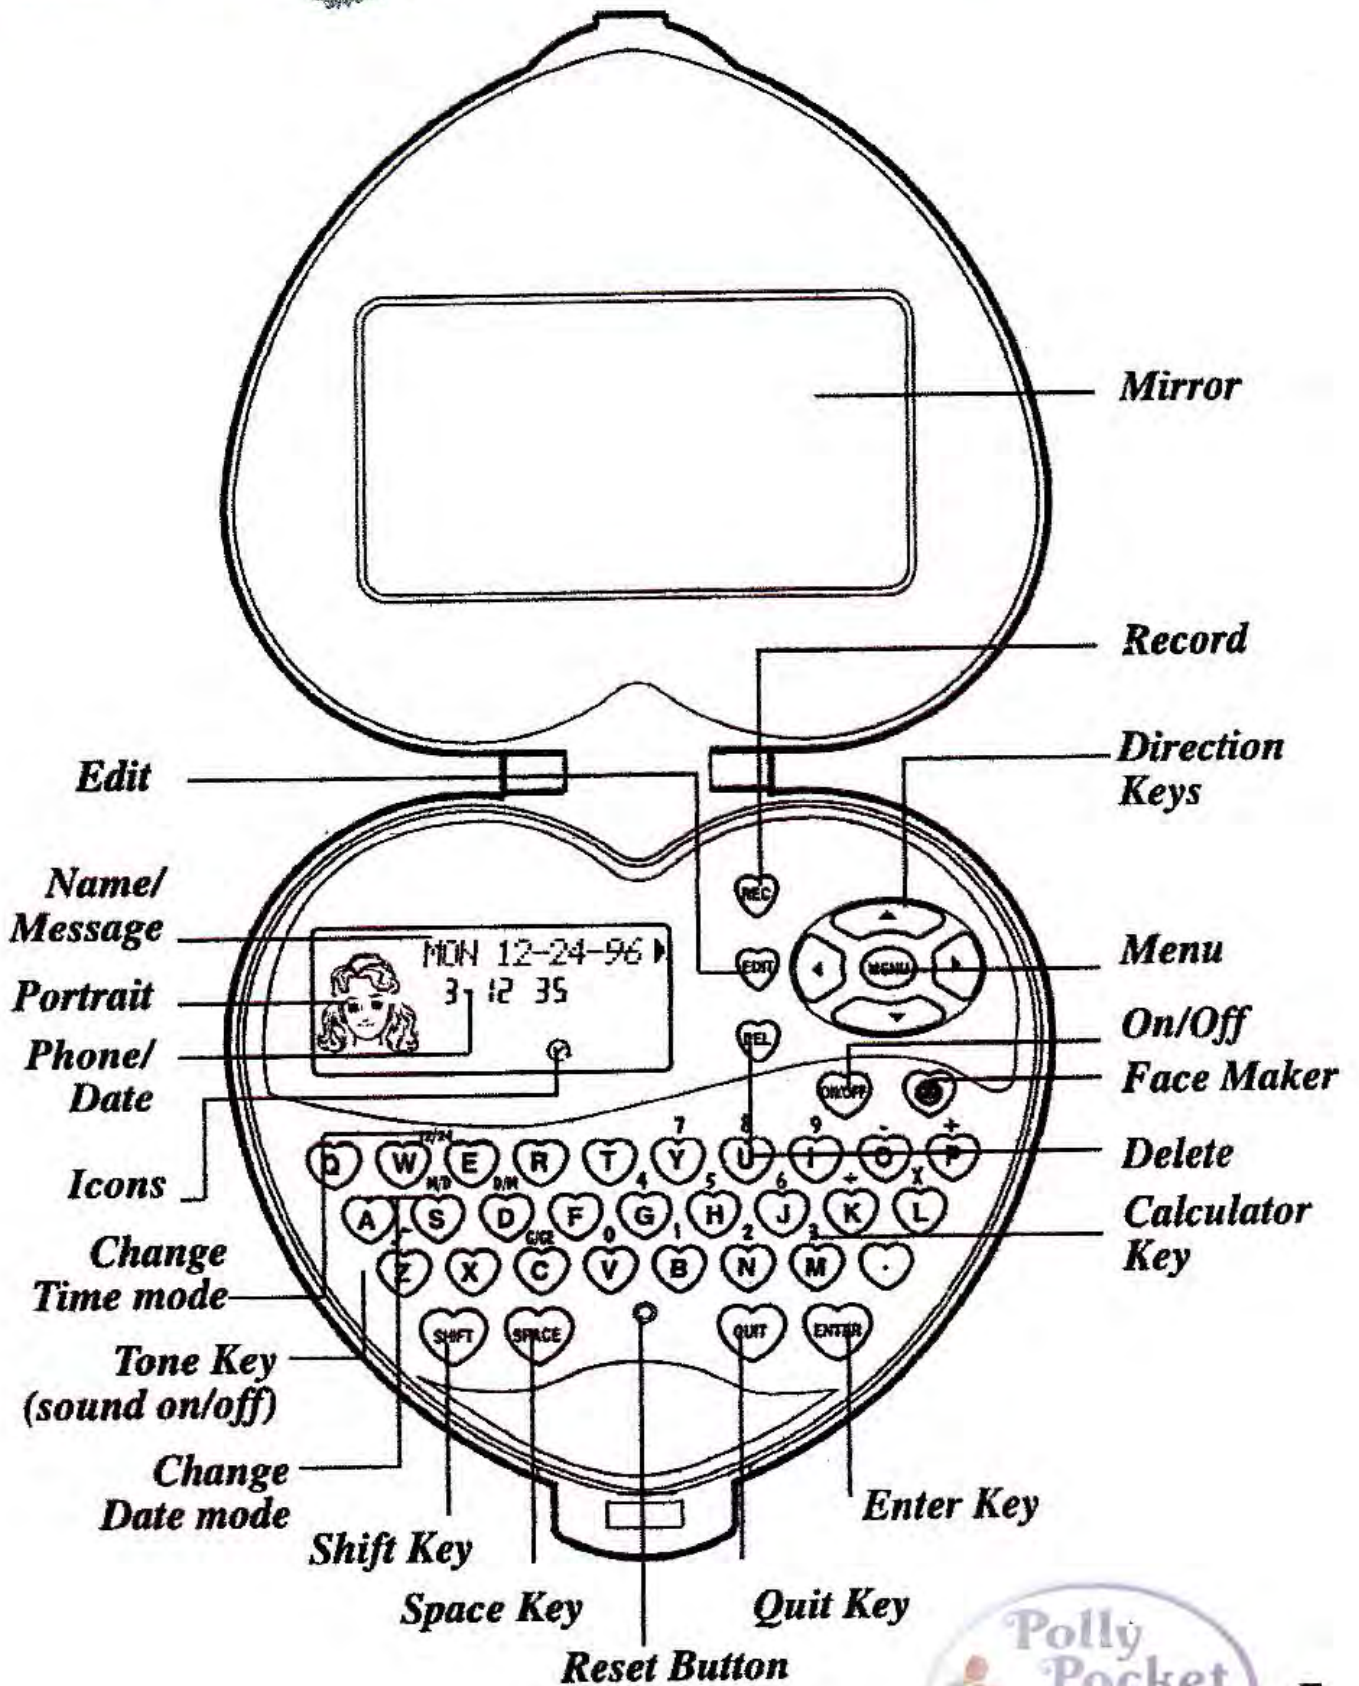

Keys and Display

Description of the Keys

<i>The Key</i>	<i>Function</i>
<i>1,2,3,...+,-,=...</i>	<i>use the calculator as required.</i>
<i>12/24</i>	<i>change time display format from/to 12 hours display (for use in USA), and 24 hours display (for use in Europe).</i>
<i>A,B,C,...</i>	<i>type any required capital alphabet letter.</i>
<i>C/CE</i>	<i>cancel/ clear last or all of the information, in the calculator mode</i>
<i>D/M</i>	<i>change date format to Date-Month-Year</i>
<i>M/D</i>	<i>change date format to Month-Date-Year</i>
<i>DELETE</i>	<i>delete an existing entry</i>
<i>DIRECTION</i>	<i>Choose the correct key to move on the screen to the required direction</i>
<i>EDIT</i>	<i>modify the information.</i>
<i>ENTER</i>	<i>confirm and finish an operation</i>
<i>FACE</i>	<i>change the FACE you want</i>
<i>QUIT</i>	<i>quit the present operation</i>
<i>RECORD</i>	<i>start recording a new entry</i>
<i>SHIFT</i>	<i>for you to enter a digit (and not a letter) in the name or message or a special European letter or to use any other function which is written above a key.</i>
<i>SPACE</i>	<i>Add space between two words</i>




Get Start

Notes: Please press RESET before you use this unit for the first time.

A. Turn on

-Press the ON/OFF Key

(If you want to change the face on screen, press "Face")

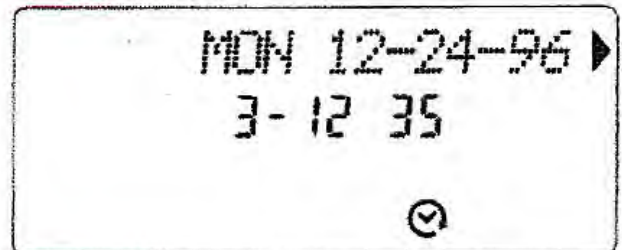

B. Turn-off

-Press ON/OFF again.

Time and Calendar Screen



To reach this screen

- Select the Time Icon in the Menu Screen, and press ENTER or*
- Press QUIT a few times in any mode, or*
- Simply turn ON the unit.*

Set time mode

- Press the time mode key (Letter "E") between 12 hours display (example: 5:15 p.m.) to 24 hours display (example: 17:15)


To set date and time

- 1. Press EDIT key and hold down for about 2 seconds the left digit will flash.*
- 2. Press D/M - for date format Date-Month-Year (example: 16-10-96)
Press M/D - for Month-Day-Year (example: 10-16-96)*
- 3. Key in the correct date and time which are based on the selected format on step 2. Note: In 12 hours mode - press 'A' for AM, and 'P' for PM*
- 4. For changing day-of-week, use the UP/DOWN direction keys to select.*
- 5. Press ENTER to confirm the data.*



Main Menu

1. Press the MENU key to access to Menu screen
2. Use the direction-keys to select a function. The selected icon will flash. Press ENTER to confirm your selection

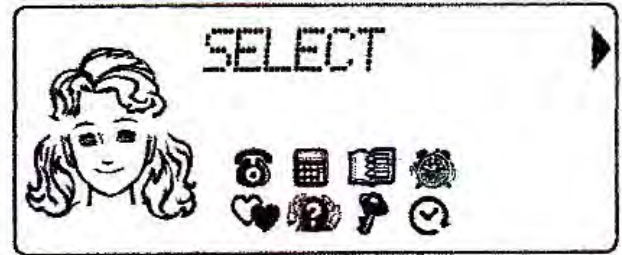

Phone Directory



Search Data

1. From the Menu screen, select the Phone Directory icon and press ENTER.
2. Use the Up/Down cursor key to search for the next / previous entries. All the data will be arranged in alphabetical order.

Record a new entry

You can store up notes and some special thoughts up to 64 letters (and digits), for each at the entries. You will see the last 11-12 characters only, but all the data will still be there. To view the rest of data, press the LEFT/RIGHT directional key to scroll the data.

Press RECORD


Name?

Enter the name. Example: Susie Jones.

Type 'S' 'U' 'S' 'I' 'E'

SPACE 'J' 'O' 'N' 'E' 'S'

SUSIE JONES_

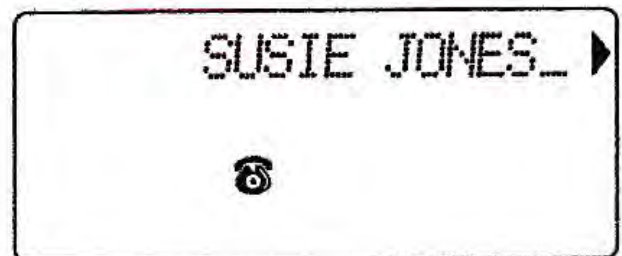

Enter the address (only if you wish).


Example: 10 Cook Ave.

Type SPACE

SHIFT '1' → SHIFT '0' →


'C' 'O' 'O' 'K' SPACE 'A' 'V' 'E'

10

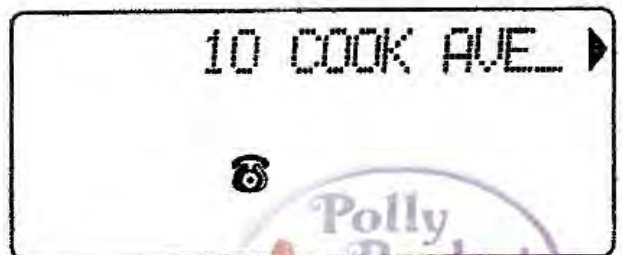

10 COOK AVE.

Press **ENTER** to confirm the name (and address), then record the phone number

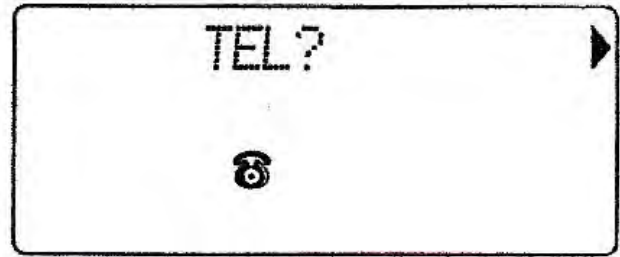


TEL?

Type the phone number.
example: 408-1236699

TEL?

408-1236699

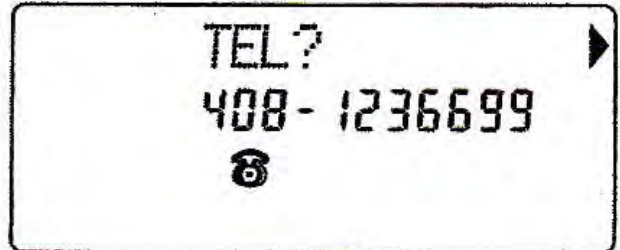


Press **ENTER** to confirm.

The new entry is recorded.

The screen back to the Search mode.


SEARCH

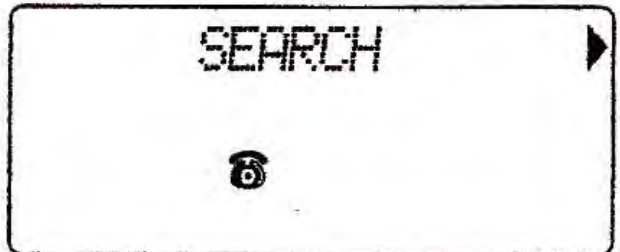

Delete the entry

If you wish to delete an entry. Recall entry to screen then press **DEL.**, and hold for 2 seconds. Screen will shown 'DELETE? Y/N'.

-Press 'Y' to confirm, 'N' to skip it.

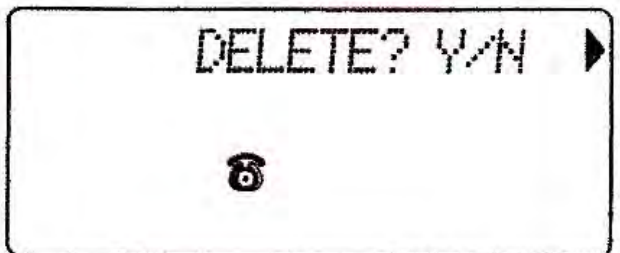

Entering European Characters

- To enter a special European character (Such as Ä, Ö, etc.) press **SHIFT** before the basic letter, and then press the letter repeatedly - until you reach the desired result.

- To continue to the next letter of the name - press any other letter, or use the **RIGHT** directional key.

Face Maker



You can combine various facial features to create portraits of the people whose names, addresses, and phone numbers you store in your telephone directory. The face features that can be montaged are: hair, eyes, mouth and eyebrows. Different combinations of the different features can be montaged.

The Procedure

- After you finish entered the name (and address) BEFORE you press the FACE key, then a face will appear and flashing on the screen.
- Press DOWN direction-key to select the area to change. Use RIGHT / LEFT direction-key to select. There are four different areas and the number of choices are listed below:

Area to change
no. of options

Eyebrows

2

Boy / Girls / Hair Style

2 (long / short hair)

Eyes

4

Mouth

3

	Change Area / No. of option	Exsample
Eyebrows		
Hairs		
Eyes		
Mouths		




- Press **DOWN** direction-key again to see the final result.
- If you still wanted to change something, press the **DOWN** key twice to go to the area that you want to change by using the down key then press the **LEFT / RIGHT** to have your selection.
- Press **ENTER** when you are happy with what you have created. then you can continue to record / edit the telephone number.

Calculator



- Press **MENU** key to go to the menu screen, highlight the calculator icon and press **ENTER**.

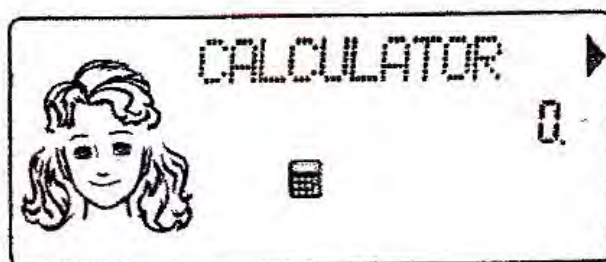

Operation

- Use the digits keys and the function keys (+ - : x ÷ ENTER) like the normal operation (Example: For $4+7=$ type '4' + '7' 'ENTER').
- Press **C/CE** key to Clear Everything.

*For the "ENTER" button to be used as = for all calculations.

Scheduler Items



Introduction

We have 3 different type of scheduler to fit to your needs:

A. Diary/Things-to-do



You can record all the important things that you need to do, and this unit will remind you at that time.

B. Homework



To record your homework so that you will not miss anything.

C. Birthdays



A very special category for you to remember the special day for your very special person.

Scheduler - Record

- Select the Scheduler Icon in the MENU screen, and press ENTER.




- Press record button

- Select require icon by pressing left or right button.

- Press ENTER button.

- Type message press ENTER

Note: The alarm will sound on the date and time and the message will appear on the screen. This operates whether the diary is swiched ON/OFF.

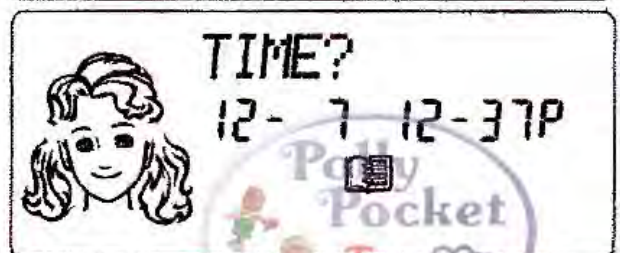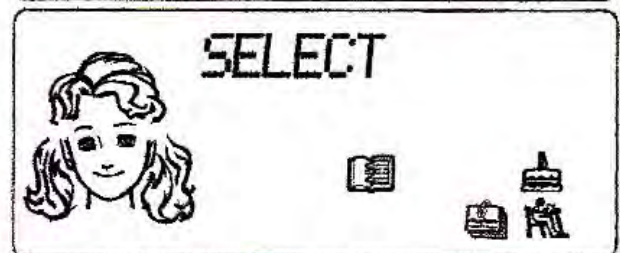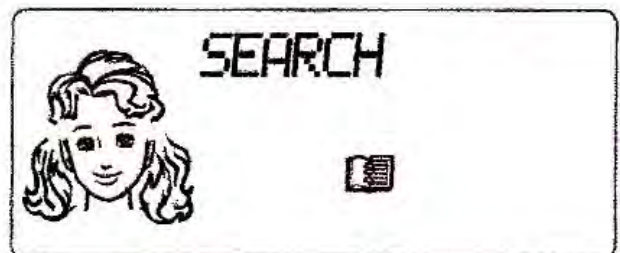

The procedure

Scheduler- Search

- *Select the Scheduler Icon in the MENU screen, and pressing ENTER.*
- *You reach the Scheduler Search mode. Now you can select the message you require by press the UP/DOWN directional keys to browse for your information. All the information is already sorted by date.*
- *When you finish searching, press QUIT and you will go back to the Date/Time screen.*
- *Press RECORD. Now the unit will ask you to select the category to record to. You can select a category by pressing the LEFT/RIGHT directional key to highlight the category icon. Press ENTER to confirm your selection.*
- *Type the message .Example: meet Jimmy. Type 'Meet Jimmy'.*
- *Press ENTER. Change the date and the time to the date/time of the meeting.*
- *Press ENTER to confirm. The new entry is recorded. The screen will be back to the Search mode.*

Scheduler - Delete


- *Search the entry that you wish to edit / delete*
- *Press DEL., and hold for 2 seconds. Screen will show 'DELETE? Y/N'.*
- *Press 'Y' to confirm (or 'N' if you want to skip it).*




Alarm



To set the Alarm

- Choose the Alarm icon in the MENU screen, and press ENTER.
- To set the alarm time - press EDIT and hold for a few seconds. Type the desired hour and minutes.
- Press ENTER when alarm sounds.
- Press the tone button to stop it.
- The alarm is automatically switched on when the time is set. When the TONE key is pressed twice when setting the alarm,
-  This icon appears on the screen. This means that the alarm will be silent, and the organizer will only display time.
- When the alarm sounds press the TONE key once to reset to the next day. Press TONE key three times to turn the alarm off completely.



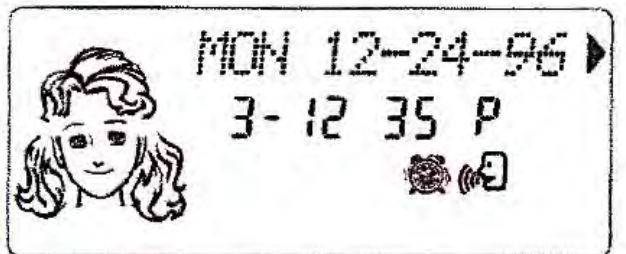


Match-Maker



Procedure




- Choose the Match-Maker icon in the MENU screen, and press ENTER.
- Type your birth date, and press ENTER.
- Type your partner's birth date, and press ENTER. Then wait for a few seconds.
- A matching score will be given by the no. of hearts displayed. There are 10 different levels of how well you and your partner match. The more heart displayed - the more you match with your partner / The fewer hearts - the less you match.

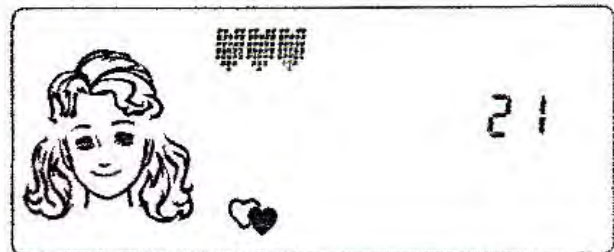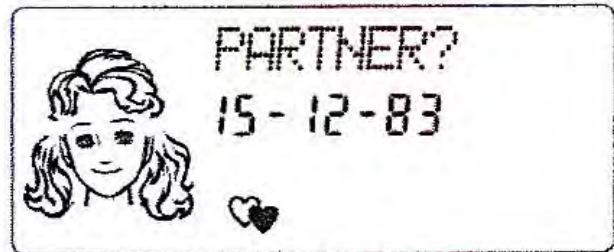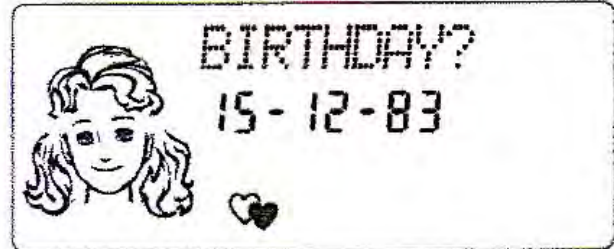

Fortune-Teller



- Choose the Fortune-Teller icon in the MENU screen, and press ENTER.
- Type your birth date, and press ENTER.
- Type your target date for checking your fortune, and press ENTER. Then wait for a few seconds.
- A score will be given by no. of stars displayed. There are 10 different levels of how your fortune is at the target day. The more stars displayed - the more luck you will have / The fewer stars you got - the less luck you have.

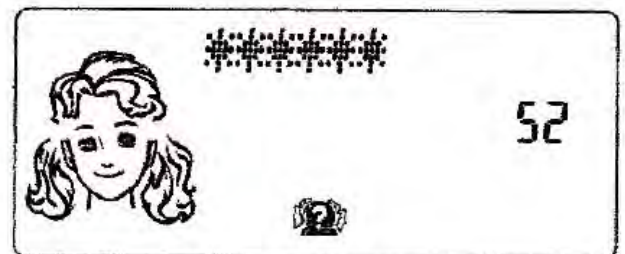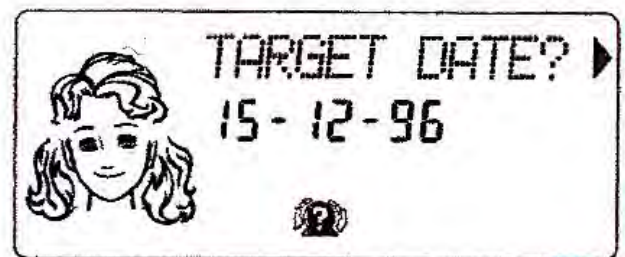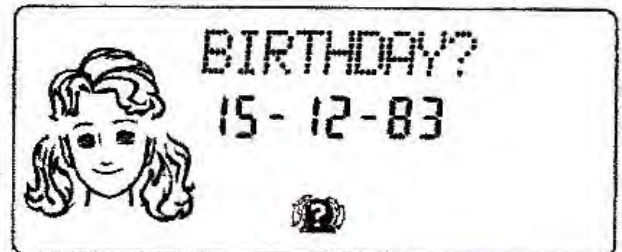


Secret Password



Attention! Make sure that you don't forget you own password if you use it to lock you secrets, otherwise you cannot access your own data any more! Use a number of four digits and write it down in a secret place that you'll not forget (and your friends will not be able to guess)


To Lock

- Choose the Secret Password icon in the MENU screen, and press ENTER.
- Type in a Password and press ENTER. (Make sure you will not forget your password!!).

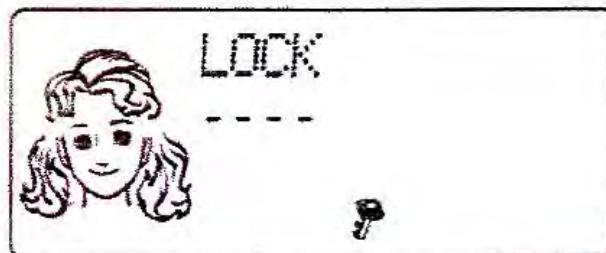

Unlock

- When you choose Phone directory (or Scheduler) - you have to type your password to unlock, and press ENTER.

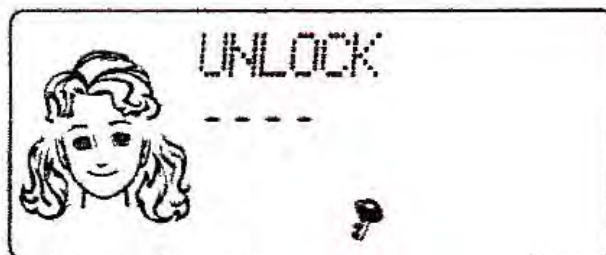

Change password

- Choose the Secret Password icon in the MENU screen, and press ENTER.
- Type your old password, and press ENTER.
- Type now the new password and press ENTER. (Be careful not to forget your password!!).

Cancel the Lock Function

- Choose the Secret Password icon in the MENU screen, and press ENTER
- Type your password, and press ENTER.
- Press MENU then press any other mode key .

Forget your Password?

RESET is the only way to solve this problem. However, once you reset the unit, all data is erased. The unit will reset to be exactly as a new one.



General Information

Batteries

It is always recommended to write down all the information before changing batteries.

Type of batteries

- This unit uses 2 standard lithium button-cell batteries type CR2032., one of them is to provide the power for normal operations, and the other is serve as the backup battery (to keep the data while you are replacing the battery).

When to replace each battery

- Replacement of the main battery is required as soon as possible after the LCD screen becomes dim.*
- Replacement of the backup battery is required every 3 years.*
- Replace one battery only each time, otherwise the data stored in this unit will be lost.*

How to replace a battery

- Switch off the power,*
- Remove the screw that holds the cover of the battery compartment (in the back of this unit).*
- Remove the old battery carefully (while noticing the side of the + mark),*
- Insert the new battery (while carefully noticing the side to the + mark!).*
- Replace the cover, and secure back in place with its screw.*

Reset Function

When is RESET required

- Before using this unit.*
- Whenever this unit seems to have a problem that you cannot solve otherwise.*
- Whenever you want to clear at once all its data.*



How to RESET

- *Locate the RESET key hole between the SPACE and QUIT keys.*
- *Insert a ballpoint pen into the hole and press for about 1 second. The screen will go blank then return to normal day, date, time mode.*
- *Note: All the memory has been erased. You now need to setup the time and date (and to change the time and date modes, if necessary).*

Auto power off

- *To conserve the batteries - This unit will switch itself off, after about 2 minutes of not pressing any button.*



General Precautions

- Avoid dropping the unit or subjecting it to strong impact.
- Not to use or keep this unit in very low temperatures. The display response will slow down or will not working. Very low temperature can also shorten battery life.
- Avoid exposing the unit to direct heat of any kind (such as direct sunlight, on top of an electric device, or close to the fire stove etc.).
- high humidity or dust area should be kept away from the unit. Never allow liquids to come into contact with the unit.
- Avoid bending or twisting the unit. Carrying it in you back pocket, for instance, can subject the diary to abnormal bending and twisting.
- Never press the keys with a pen, pencil, or other sharp object.
- Wipe the diary with a soft cloth. You may wipe the exterior only with a soft cloth that has been dipped in a weak solution or a mild, neutral detergent with water when necessary.
- Don't wipe the display surface with a rough cloth. Never touch the mirror surface with your fingers.
- In no event will the manufacturer and/or supplier be responsible for any direct or indirect damages due to loss of data or due to any other cause resulting from the use of this unit, including incidental or consequential damages, lost profits, etc.





The Electronic Division Bluebird Toys



™ and Bluebird Toys UK Ltd.

Made in China

© 1996 Bluebird, Swindon, England.

Customer Service

Peter Pan, Dragonparc,

Merthyr Tydfil Mid Glamorgan CF48 1PG

Customer Service Tel: 01685-721456

**Consumer Note: Please keep a note
of this address for future reference.**

Ref: 60008/IM/Rev.2/1096



**CONFORMS TO
BRITISH STANDARD 5603**